



CAUTION -- ADULT SUPERVISION REQUIRED

Activity toy: Recommended for children between 3 and 9 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Warning! The Mains operated fan supplied with this toy is intended for adult use only and has been designed to maintain the correct pressure in the toy during use.
Do not use alternative fans. Do not allow children to operate or play near to the fan.
No user serviceable parts inside.

Caution - The fan supplied with this toy is provided with a factory fitted plug, and must only be connected to a mains supply with an RCCB type circuit breaker.

Age Recommendation: 3 to 9 Years

Manufactured By:

The Ninja Corporation (UK)
Topaz House, Oldgate
St Michael's Industrial Estate
Widnes, Cheshire
WA8 8TL UK
T: +44 (0) 151 495 1677
F: +44 (0) 151 495 1675
E: admin@thepopupco.com

Please retain these instructions for future reference

General Safety Notices

Adult supervision is very important. We recommend that at least 1 adult supervises children at all times. Children must not be left unattended on this toy at any time.



The fan supplied with this product is for parental use only. Children should not be allowed to play with or near the fan, or to activate or control the fan in any way.

This fan should only be connected to a mains supply with a Ground Force Interrupt (RCCB) type circuit breaker.

This fan should not be sited near to any item emitting fumes (e.g. BBQ's).

Keep all children away from this fan whilst in use.

No more than 3 children should play on this product at the same time. The total weight of children playing on this toy at any one time must not exceed 75 kgs or 165 lbs.




Do not use in bad weather conditions (high wind or rain).



Store indoors. Dry thoroughly before storage and use.



Maintain a 1m (3ft) clearance around each face of the product for safe play. Do not locate this product near to furniture, walls, sharp objects or other hard surfaces, and clear the play area of any other toys/ stones etc before setting up this toy.

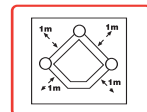

Helmets or other headgear should not be worn whilst playing on this product.

Loose or baggy clothing, or clothing containing long cords should not be worn whilst playing with this product.

Keep pets away from this product at all times.



Remove shoes, eye glasses and sharp objects (e.g. belts) before entering.



Whilst play on this toy may be expected to be boisterous, parents should ensure children do not deliberately bounce into each other, or into the sides of the toy.

Children should be encouraged to climb on and off the toy. Parents should discourage any attempt to bounce directly off the toy onto surrounding ground. This could cause personal injury, and could be hazardous to other users.

Set up as near to the power source as possible.

Please ensure that anchor positions are checked regularly during play and that they are re-secured where appropriate.

This product is heavy, please handle with care.
Do not drag the product as this could cause tearing.

This product should be examined regularly. In particular, the electrical flex attached to the fan should be checked at each use, and if signs of wear and tear are seen, use must be discontinued immediately, and the fault rectified by a qualified electrician or electrical technician.

WARNING! Keep away from fire.



Outdoor Use Only

Assembly of Your Airflow Adventures Bounce House

IMPORTANT INFORMATION

The fan supplied with this toy is provided with a factory fitted plug, and must only be connected to a mains supply with an RCCB type circuit breaker.

No user serviceable parts inside.

The assembly and packing away of your Airflow Adventure Bounce House should always be carried out by a responsible adult.

Your Airflow Adventure Bounce House requires careful positioning, pegging down and attachment to the fan before use.


Please read the following instructions and safety notices carefully before starting to position the item for play.

Safety Instructions: Please Read Before You Start


1. Please read and carefully follow the instructions provided within this leaflet.
2. This leaflet provides instructions for the assembly, use and packing of your Airflow Adventures Bounce House.
3. Start by checking all parts against the parts list.
You will find this easier if you lay the parts out on a flat surface.
4. At least one responsible adult should assemble the Airflow Adventures Bounce House. Assembly should take less than 10 minutes. Taking time over assembly helps to ensure safety.

Assembly Assembly should take no more than 10 minutes

1. Before each use please check that the electrical cable has not become damaged. If damage is found or suspected, **do not use the fan**, and consult a qualified electrician.
2. Once you have checked that all parts are present, position your Airflow Adventures Bounce House on a level surface such as grass. **NEVER** place your Airflow Adventures Bounce House on a hard surface (e.g. a stone patio etc.)
3. Please ensure that you have adequate space for assembly and allow at least 1m (3 ft) of clear space around each face of the product for safe play. For comfort and safety, you should clear away all stones, other toys etc., from the play zone prior to set-up of this product.

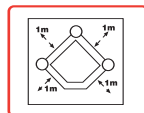

4. Connect the air inflation tube (the longer tube) to the fan by positioning it over the air outlet. Using the tie-wrap provided, secure the inflation tube firmly in position by wrapping the tie around the end of the inflation tube ensuring that it is contained fully within the recess provided and tying a bow to complete.

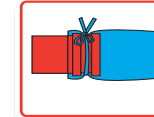

5. Place the fan on a flat, firm surface ensuring that the air inflation tube is not twisted. It should remain taut between the end of the fan and the Bounce House, allowing easy airflow into the system. Twists or kinks in the inflation tube will restrict airflow.
6. Seal the deflation tube (the shorter tube) using the ties provided (attached to the end of the deflation tube).
7. Peg the fan down using the pegs supplied and ensure it remains upright during play.
8. Plug the fan into an RCCB circuit protected mains supply, stand clear and watch as your Bounce House inflates. Place the fan in an area where the inlet will not suck in dirt, leaves, water or fumes (from BBQ's etc). Children should not be allowed to play in the vicinity of the fan, so as to minimise the risk of tripping over the inflation tube.
9. Your Bounce House should be anchored firmly to the ground using the pegs provided before and during use.

Deflation and Packing Away

1. Deflation should be carried out by a responsible adult.
2. All children should step off the Airflow Adventure Bounce House and all toys and other objects should be removed before deflation.
3. Fully dry the Airflow Adventure Bounce House before deflating to avoid the possibility of mould formation during storage.



4. Switch off the fan, and disconnect from the electrical supply. Release the ties on both the deflation tube and the air-inlet (inflation) tube attached to the fan. Air should begin to be released from both tubes.
5. Allow your Airflow Adventures Bounce House to deflate completely on its own. This should take around 5-10 minutes.
6. Fold your Airflow Adventures Bounce House such that any air retained within it is pushed towards the air-inlet and deflation tube.

Storage

1. Place the item in its carry case and store it in a dry place ready for further fun. It's as simple as that!
2. Do not let your Airflow Adventures Bounce House and Fan become exposed to rain or bad weather when not in use.



3. Store fan upright to prevent damage occurring when not in use.

Care of Your Airflow Adventures Bounce House

1. Your Airflow Adventures Bounce House may be cleaned using a soft sponge and warm water.
2. Your Airflow Adventures Bounce House has been manufactured from tough materials and should, with careful use, remain free of defects for many years. If, however, the material part (i.e. the upper part of the Airflow Adventures Bounce House) is snagged or torn then it may be patched or sewn together again using a standard needle and thread. If the base is punctured, tears or rips, please use the plastic patches and glue provided to seal the puncture or tear, before continuing use. Please follow the detailed application instructions contained within the repair kit.

Parts List

Part	Qty
Bounce House	1
Airflow Adventures Fan	1
Plastic Pegs	5
Carry Bag	1
Repair Kit	1

Instructions for Repairs

Repairs must only be performed by a responsible adult. Keep repair kit away from children.

Your Bounce House is manufactured from high quality materials. However, any tears or rips can be repaired with the patch kit included as follows:

1. Carefully wipe clean the area to be repaired using a mild detergent and warm water. Once clean please ensure that the material is thoroughly dried.
2. Using scissors cut a patch to size such that it overlaps the area to be repaired by at least 6 mm (1/4").
3. Carefully spread a light layer of adhesive onto both the patch and the surface to be repaired, extending 6 mm (1/4") beyond the perimeter of the repair area.
4. Position the repair patch over the repair and press down firmly.
5. lightly sprinkle talcum powder on the repair, before using a smooth, heavy item to maintain uniform pressure for 24 hours before re-inflation.

Warning! Repairs must only be performed by a responsible adult. Keep repair kit away from children.

Danger! Flammable mixture with harmful vapours.



- Do not use near any sources of heat, sparks or open flames.
- If swallowed, do not induce vomiting and consult a doctor immediately.
- Avoid prolonged or repeated breathing in of the vapour released from the adhesive and only use in areas with adequate ventilation, preferably outdoors.
- Avoid contact with skin and eyes. In case of contact with eyes, flush the area with plenty of clean water and consult a doctor immediately.

